

TROUBLESHOOTING

The following chart lists the most probable faults. There are no internal adjustments or user-replaceable parts. If this does not solve the problem, refer service to your dealer.

FAULT	ACTION
No display when turned on.	Check condition of batteries. Check that batteries are inserted properly.
Display shows - - - -	Out of range indication.
Display shows OPEn	Open thermocouple connection.
Display shows Err	If displayed at any time other than during field calibration, return instrument for service.

I

WARRANTY

The Manufacturer warrants this product to be free from significant deviations from published specifications. If repair or adjustment is necessary within the warranty period, the problem will be corrected at no charge if it is not due to misuse or abuse on your part as determined by the Manufacturer. Repair costs outside the warranty period, or those resulting from product misuse or abuse, may be invoiced to you.

This product comes with a warranty of 3 years.

PRODUCT RETURN

To limit charges and delays, contact the seller or Manufacturer for authorization and shipping instructions before returning the product, either within or outside of the warranty period. When returning the product, please state the reason for the return. For your protection, pack the product carefully and insure it against possible damage or loss. Any damages resulting from improper packaging are your responsibility.

TECHNICAL ASSISTANCE

If you have any questions about the use of this product, contact the Manufacturer or authorized seller.

Trademarks bearing the ® symbol in this publication are registered in the U.S. and in other countries.